

INSTALLATION INSTRUCTIONS

RainGuard™/ColorGuard™


Construction Sequence

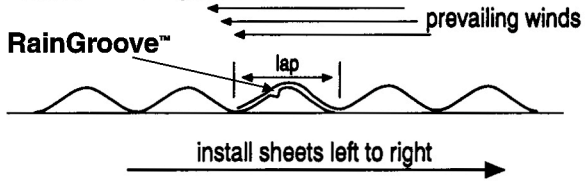


Fastener Placement

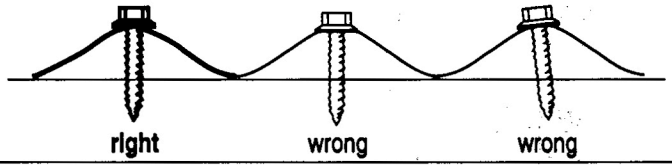

Screws at Lap Joints

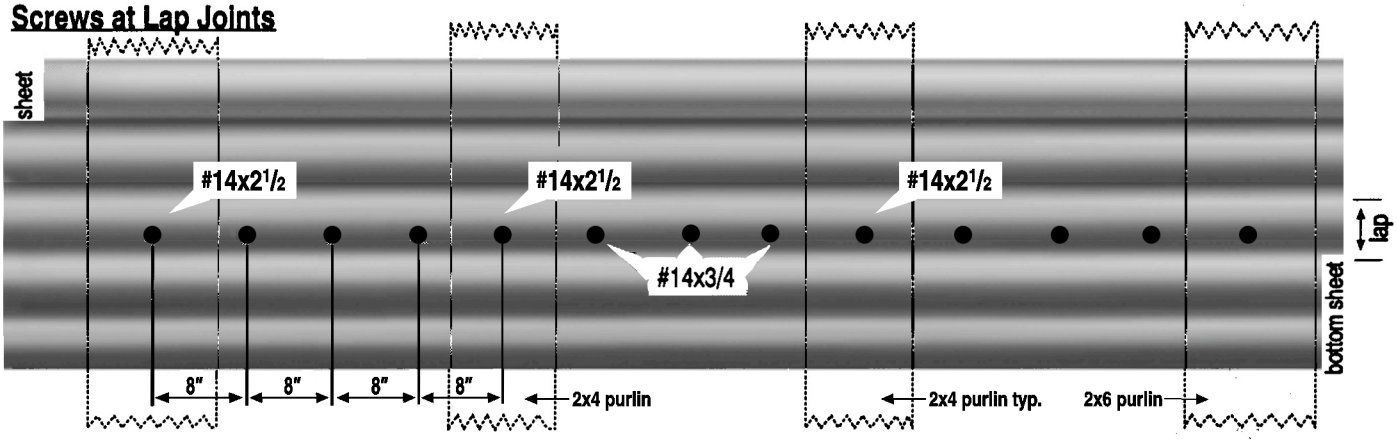

Screws at Purlin Lines

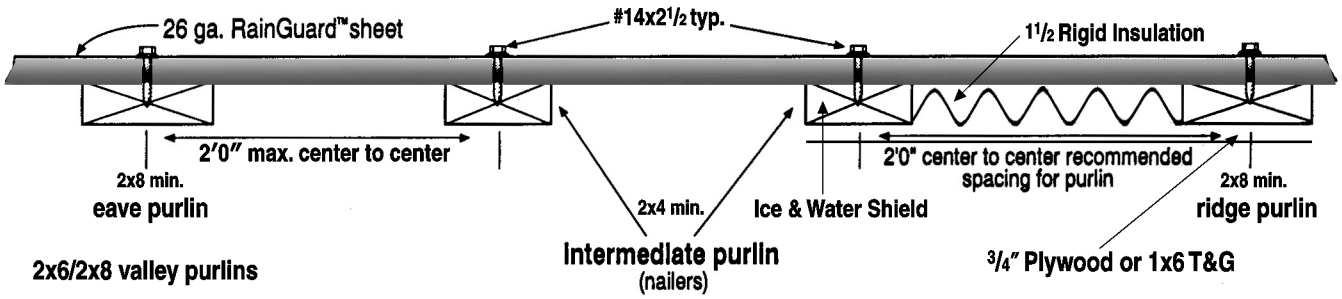


Screws at Intermediate Purlin



Screws at All Eaves, Ridges, Hips, Valleys & Gable Ends



Lap Detail

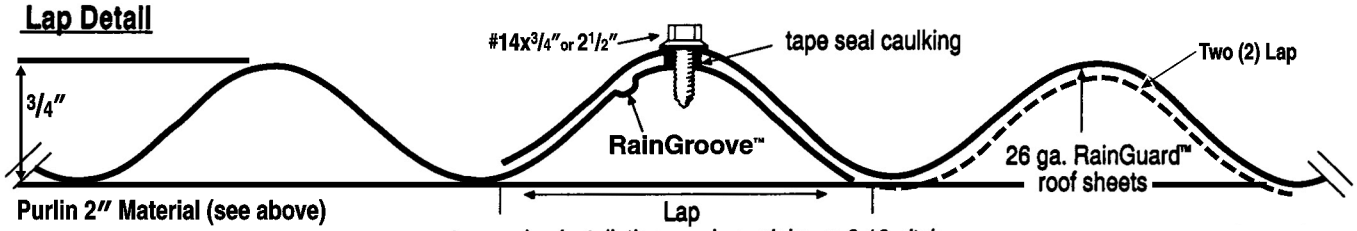

note: one lap installation requires minimum 3:12 pitch